

## Notes

1. The timer starts keeping time when you set it. You **Must** set the timer at the hour you want it to run. For example, as in Sample Program B, if you want the timer to come on at 7:00am you must physically set it at 7:00am.
2. You may change frequencies and run time at any time by just turning the **Frequency knob** or the **Run Time Knob** to a new setting.
3. To **Stop** the timer and cancel the frequency setting, turn the **Run Time Knob** to **Off**. All watering will stop. To reactivate, you must reprogram the timer.

## Trouble Shooting Guide

If the water does not come on, please check the following:

1. Make sure the tap is turned on.
2. Check the batteries are in good condition and are installed correctly.
3. Make sure that the frequency setting is longer than the run time. For example, you cannot set the frequency at the 1 hour setting and have the run time set for anything over 60 minutes.

## Caution

- Protect the timer and its parts from freezing.
- Prior to the first frost or freeze, remove the timer and store it indoors until spring.
- Remember to remove the batteries from the battery compartment.

### Any Questions? Contact our Gardening Angels

We are here to help you to get the best from your plants, so if you have any questions about your Greenhouse Sensation product or the plants you are growing, contact one of our Gardening Angels.

**Call:** 0845 602 3774

**Email:** [info@GreenhouseSensation.co.uk](mailto:info@GreenhouseSensation.co.uk)



greenhouse  
sensation



For hints, tips and offers search 'Greenhouse Sensation' and click 'Like'




# Electrical Water Timer

## User Guide

With this Water Timer, your garden will be reliably and conveniently irrigated – even when you are not home. You'll have more free time to enjoy a lush, green garden with beautiful, healthy plants.

### Key Features

- Attaches directly to garden tap
- Manual On feature from 1 to 120 minutes
- Low battery indicator
- Runs on 2 x AA batteries
- Fits 3/4" taps

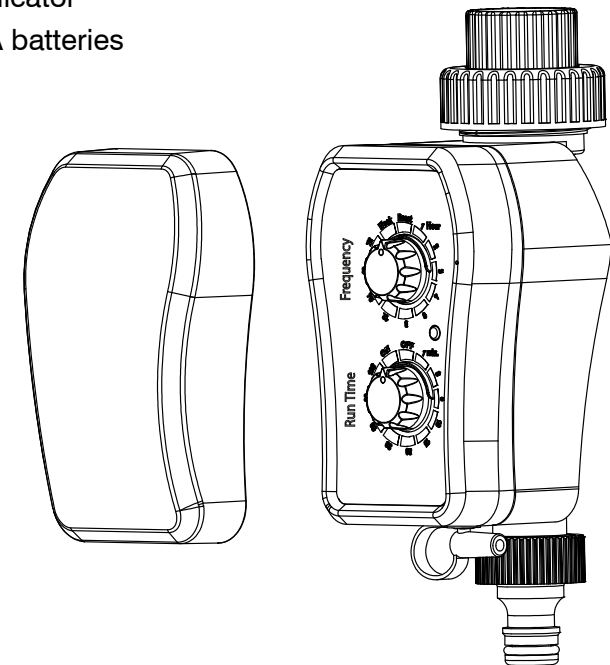

## Programming

1. Turn the knobs to set up the **Frequency Time** in hours and the **Run Time** in minutes.

**Note:** The first time you program the timer, it will not begin watering until after the time delay. The time delay is the number of hours to which you set the **Frequency knob**.

2. You can use the “**On/Off**” functions at any time without interrupting the **Frequency** setting. Just turn the **Run Time** knob to the “**On**” position. When finished turn to “**Off**” for five seconds then return the **Run Time** to your desired setting.
3. Replace the waterproof cover after programming, ensuring a tight fit.

### Example settings

- A. To water every morning at 6:00am and every evening at 6:00pm for 10 minutes each watering: Program your timer at either 6:00am or 6:00pm (the hour that you want to begin watering).

At 6:00am or 6:00pm set the **Frequency Knob** to 12 hours and the **Run Time Knob** to 10 minutes. **After 12 hours**, the timer will begin its first program and run for 10 minutes.

12 hours is the time delay before the timer begins its first program. The timer will now water every day at 6:00am and 6:00pm for 10 minutes until you change it.

- B. To water every morning at 7:00am for 30 minutes:

At 7:00am, set the **Frequency Knob** to 24 hours and the **Run Time** to 30 minutes.


The timer will not begin its program until **the next day at 7:00am** when it will water for 30 minutes. The timer will now water every day at 7:00am for 30 minutes until you change it.

- C. If you want to water just one time for 10 minutes.

At the time you want to water, set the Frequency knob to **Reset** and the Run Time to 10 minutes. The timer will start watering immediately and last 10 minutes.

## Installation

1. Undo the screws on the bottom cover. Install two new 1.5V alkaline batteries (size AA). Place the bottom cover back in the timer and tighten screws.

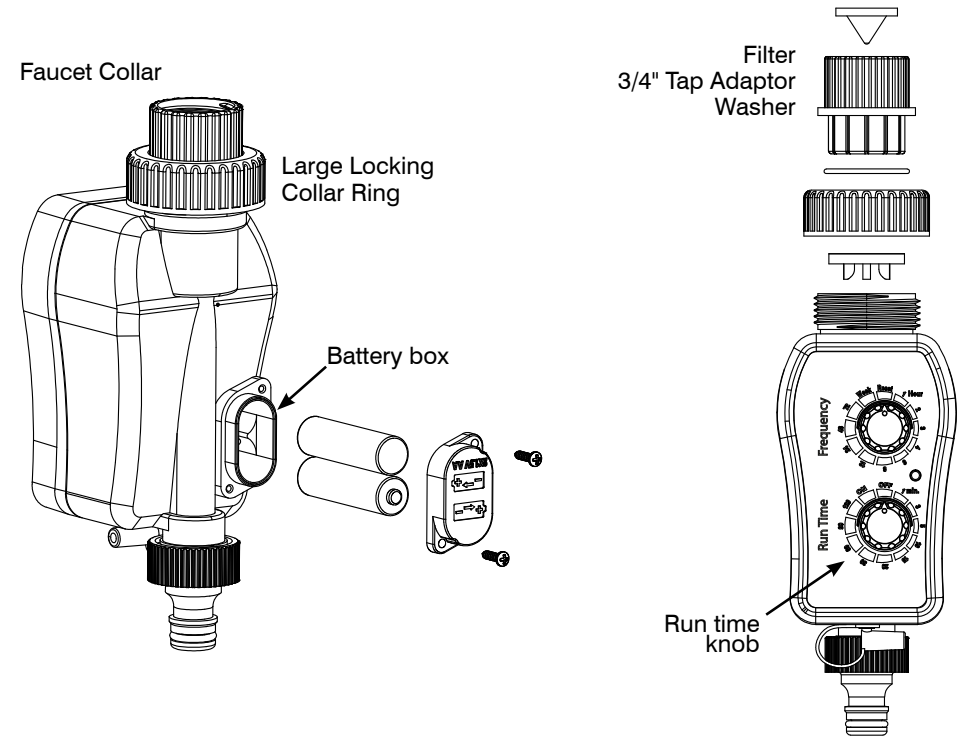

2. Test the unit by turning the **Run Time** knob from the “**Off**” position. You should hear the sound of the motor within 30 seconds.

**If you do not hear the motor, check the batteries are correctly installed.**

3. Hold the unit steady. Loosen the **Large Locking Collar Ring** located in the top of the timer until the inner **Faucet Collar** is loose. Screw the inner **Faucet Collar** onto the tap until it is hand tight, and then hand tighten the **Large Locking Collar Ring**.

Turn on the tap to open the flow of water.

**Do not use wrenches or pliers to tighten the collars.**